


# ASSEMBLY INSTRUCTIONS FOR MAINTENANCE

NM304-GB

17/02/22

# SET OF 4 REPLACEMENT BEVELED PADS FOR COMPETITION SPRINGBOARDS (2186 & 2187)

2187/20

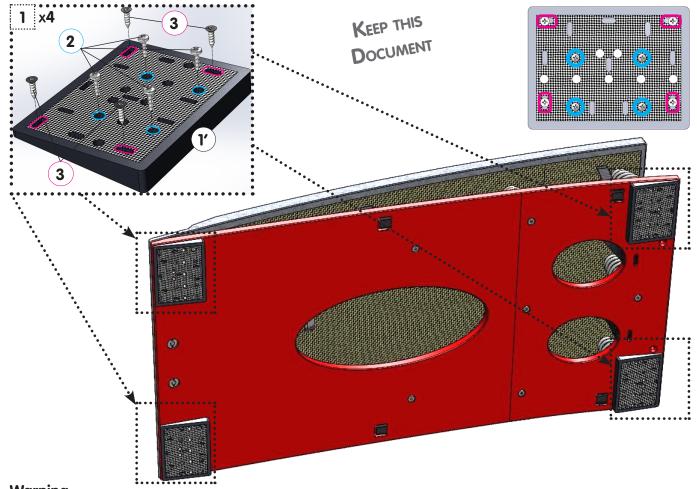

## Warning:

This equipment should be installed by a qualified individual.

Using this equipment for purposes other than those originally intended is prohibited.

#### Compliance:

For this type of FIG-approved product, the replacement of spare parts (such as non-slip pads) does not maintain compliance with dimensional requirements. This equipment will no longer be able to equip international FIG competitions.

#### **Recommendations:**

- Keep these instructions for subsequent reference (inspection, maintenance, etc.).
- Periodically carry out predictive maintenance.
- Depending on how much it is used have the equipment serviced yearly or every few years.

## **Tools required:**



# I. General maintenance:



Regular cleaning of the apparatus makes it easier to spot any problems (distortion, breakage or moisture absorption). Before each use, make a through check on good condition and correct operation of wear parts and safety elements:

- Check the condition of beveled Pads (1') and and non-slip strips (4).
- Check the condition of springs, straps and tray.
- Check the tightening of all fixings.
- If a problem is detected or suspected, do not use the equipment as long as it has not been checked by a technician.
- Any damaged or distorted component should be replaced as quickly as possible.

Constantly aiming to improve our products, we reserve the right to make changes to the equipment and dimensions without further discussion.

