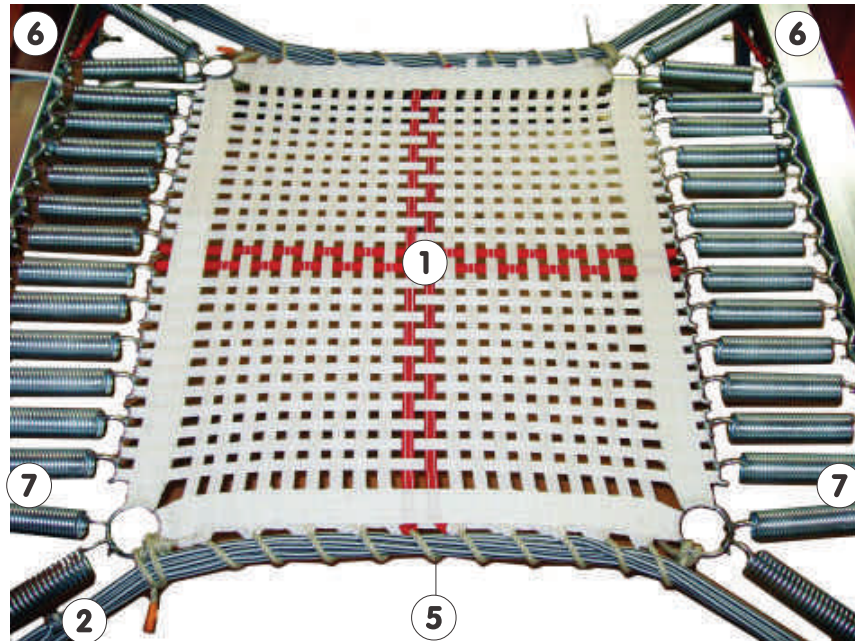
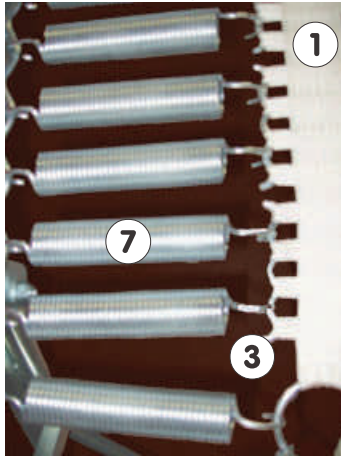


REPLACEMENT KIT
13 x 13 MM WOVEN BED
OPEN MINI-TRAMPOLINE**5048****KEEP THIS
DOCUMENT****Figure 2****Figure 1****Warning:**

This equipment should be installed by a qualified individual.

This apparatus should be used by only one person at a time, supervised by a qualified individual and with appropriate landing mats or a landing pit.

Using this equipment for purposes other than those originally intended is not allowed.

Recommendations:

As shown in French Standard NF S52-400 the following is recommended:

- keep these instructions for subsequent reference (inspection, maintenance, etc.).
- periodically carry out predictive maintenance.
- depending on how much it is used, have the equipment serviced yearly or every few years.

Packaging:

- 1 pack (Ref.: 5048) —> Woven bed for Mini-tramp Open M'2005:

Dimensions: 29.53 x 7.48 x 5.51 in – Total weight: 4.41 lb – Volume: 0.71 ft³

Assembly:**1. Preparation:**

- Remove the protections and the existing bed to proceed with exchange.
- Insert the 12 anchor bars (3) into the side loops of the bed (1), 6 along each long side (length: 27,56 in) (Fig. 1 and 2).




2. Installing the springs (7) (32 usable springs):

Method: Insert one end of the springs (7) into each anchor bar of the frame (6), then attach the other end to the matching anchor bar (3) on the bed (1), so that the springs (7) are parallel with each other (see Fig. 1 and 2).

- First attach 8 springs (7) in the bed corners (1), 2 per ring: one on the last but one end anchor bar of the frame (6) and the other perpendicular to the frame (6) as shown by Figures 1, 2, 3 and 4.
- Then attach 12 on each side of the bed (1) perpendicular to the frame (6) (as shown by Fig. 1 and 2).

3. Installing the sandows (2) (Figures 3, 4 and 5):

- Position one pair of sandows (2) at the end of the bed (1), with the metal couplings facing the frame (6).
- Secure the assembly, centered with regard to the bed (1) width: tie the rope (5) around the 2 sandows (2) and the ring.
- Lace the assembly by inserting the rope (5) into 2 successive loops of the bed (1) simultaneously, embedding the sandows (2) up to the other ring, then tie the rope (5) around the assembly.
- Assemble the 2 loop sandows (2) using 2 quick links (4) set at each end of the loops.
- Hook the links (4) to the last anchor bars of the frame (6), and do not forget closing the links (4).
- Repeat the above operations on the other side of the bed, then fit back the original protections.


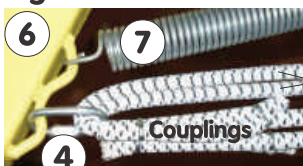
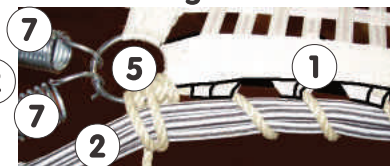
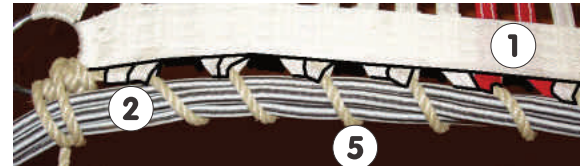
Figure 3**Figure 4****Figure 5**

30	-	-	-	-
29	-	-	-	-
28	-	-	-	-
27	-	-	-	-
26	-	-	-	-
25	-	-	-	-
24	-	-	-	-
23	-	-	-	-
22	-	-	-	-
21	-	-	-	-
20	-	-	-	-
19	-	-	-	-
18	-	-	-	-
17	-	-	-	-
16	-	-	-	-
15	-	-	-	-
14	-	-	-	-
13	-	-	-	-
12	-	-	-	-
11	-	-	-	-
10	-	-	-	-
9	-	-	-	-
8	-	-	-	-
7	-	Mini-tramp spring	521/10	-
6	-	Open Mini-tramp frame	-	-
5	2	Polypropylene rope, ø6 green	-	each
4	4	Quick link, No. 6	QMRA00006Z	each
3	12	Double hook anchor bar for bed	507/10	each
2	4	Loop sandow, 95cm long	800/19	each
1	1	Woven bed, alone	5048/00	each

Gymnova
 RUE GASTON DE FLOTTE
 13012 MARSEILLE
 Tél. : 33-(0)-4-91-87-51-20
 Fax : 33-(0)-4-91-93-86-89

BY: J.BRIOT DATE: 21/12/06 NM227A Ref.: 5048
 THIS DOCUMENT IS THE PROPERTY OF GYMNOVA. IT IS CONFIDENTIAL AND SHALL NOT BE REPRODUCED WITHOUT PRIOR AUTHORIZATION

**13 x 13 MM WOVEN BED
 OPEN MINI-TRAMPOLINE M'05**

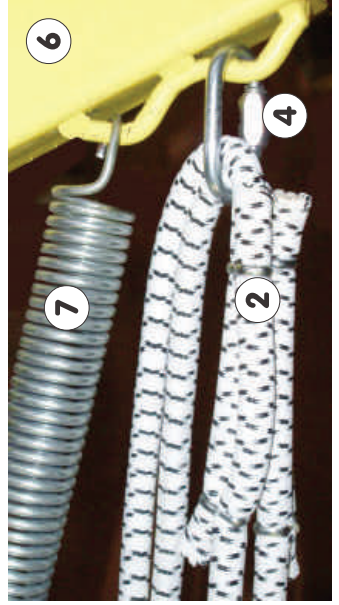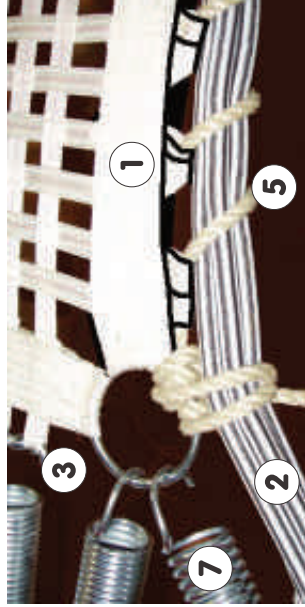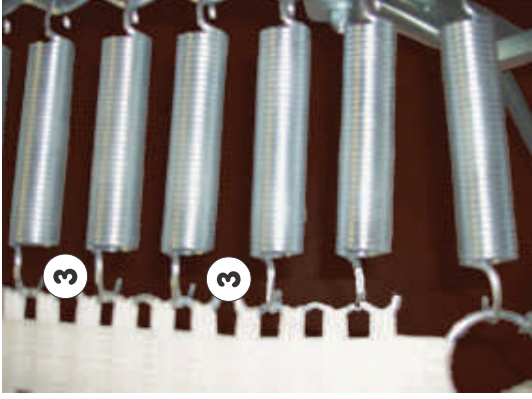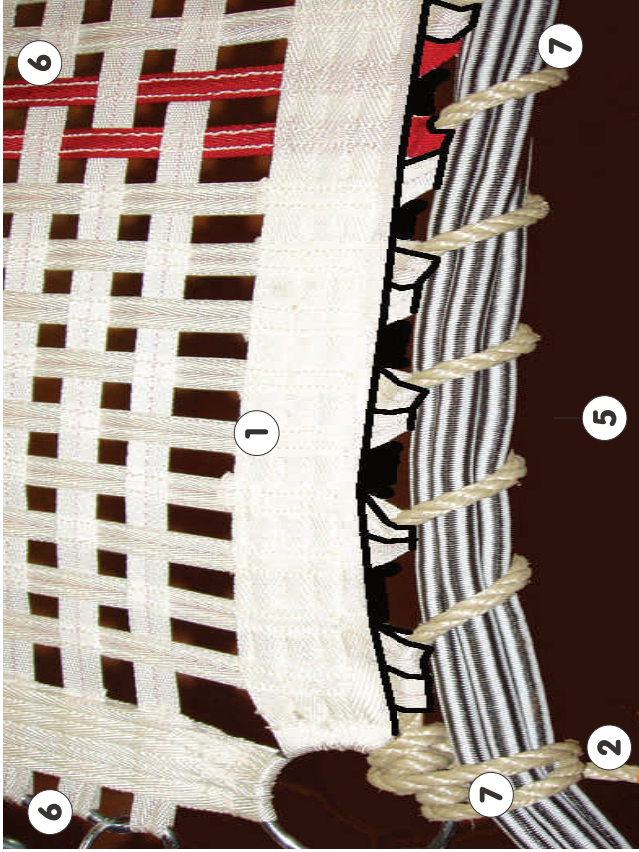

To order spare parts, provide the description, part no., and delivery date of the entire apparatus.