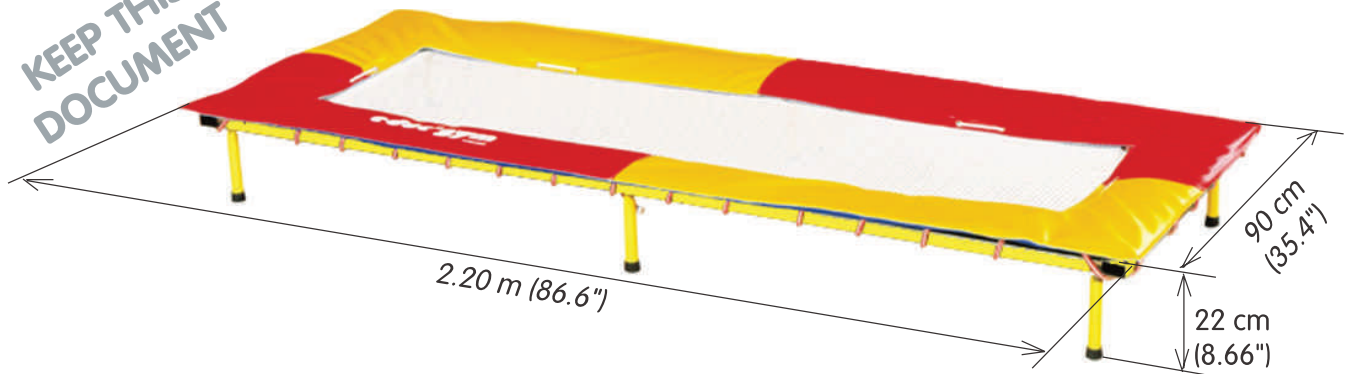


TRIPLE BABY-TRAMPOLINE**0013A****KEEP THIS
DOCUMENT****Warning:**

This equipment should be installed by a qualified individual.

This equipment should be used by only one person at a time, supervised by a qualified individual and with a landing zone.

Using this equipment for purposes other than those originally intended is not allowed.

Recommendations:

As shown in French Standard NF S52-400 the following is recommended:

- keep these instructions for subsequent reference (inspection, maintenance, etc.).
- periodically carry out predictive maintenance.
- depending on how much it is used, have the equipment serviced yearly or every few years.

Assembly of the legs (Figures 1 and 3):

- Place the triple baby-trampoline upside down, with the protection side on the floor, so that the screws of the frame **(1)** are directed upward.
- Insert the 6 washers **(9)** onto the screws, then tighten the 6 legs **(2)** under the frame **(1)**.

Maintenance:


- 1 -** A regular cleaning of the apparatus allows better viewing of the problems, if any (distortion, breakage or corrosion).
- 2 -** Before use, check wear parts and safety elements each time for good condition and operation:
 - Condition of the bed **(3)**, sandows **(4)**, plastic fasteners **(7)**, protection **(6)** and pads **(8)**.
 - Check for correct tightening of the legs **(2)**.
- 3 - Important:**
 - If a problem is detected or suspected, do not use the equipment as long as it has not been checked by a technician.
 - Any damaged or distorted piece should be replaced as soon as possible.
- 4 - Replacing the bed (Figures 1, 2, 3 and 4):**
 - Cut all 6 plastic fasteners **(7)** and remove the protection **(6)**. Remove the sandows **(4)** and the worn bed **(3)**.
 - Lace the sandows **(4)** around the frame and into the eyelets of the new bed **(3)**, tighten then tie the ends of the sandows **(4)** using the plates **(5)**.
 - Finally, hook the sandows **(4)** to the angles of the frame **(1)**. When fitting the protection back, proceed as described in the next section.
- 5 - Replacing the protection (Figures 1, 2, 5 and 6):**
 - Cut all 6 plastic fasteners **(7)** and remove the worn protection **(6)**.
 - Insert each plastic fasteners **(7)** from underneath the baby-trampoline, through the bed then the protection.
 - Slide the end of the fastener **(7)** into its clip to close it, but do not apply excessive tightening in order to allow for freedom of the bed **(3)**. Finally, cut the protruding part of each fastener **(7)**.

Packaging:

1 Pack (ref.: 0013A) -> Triple Baby-Trampoline + Protection

Weight: 23 Kg (50.7 lb) Dimensions: 2.30 x 0.86 x 0.10 m (7.54 x 2.82 x 0.33')

Volume: 0.20 m³ (7.06 ft³)

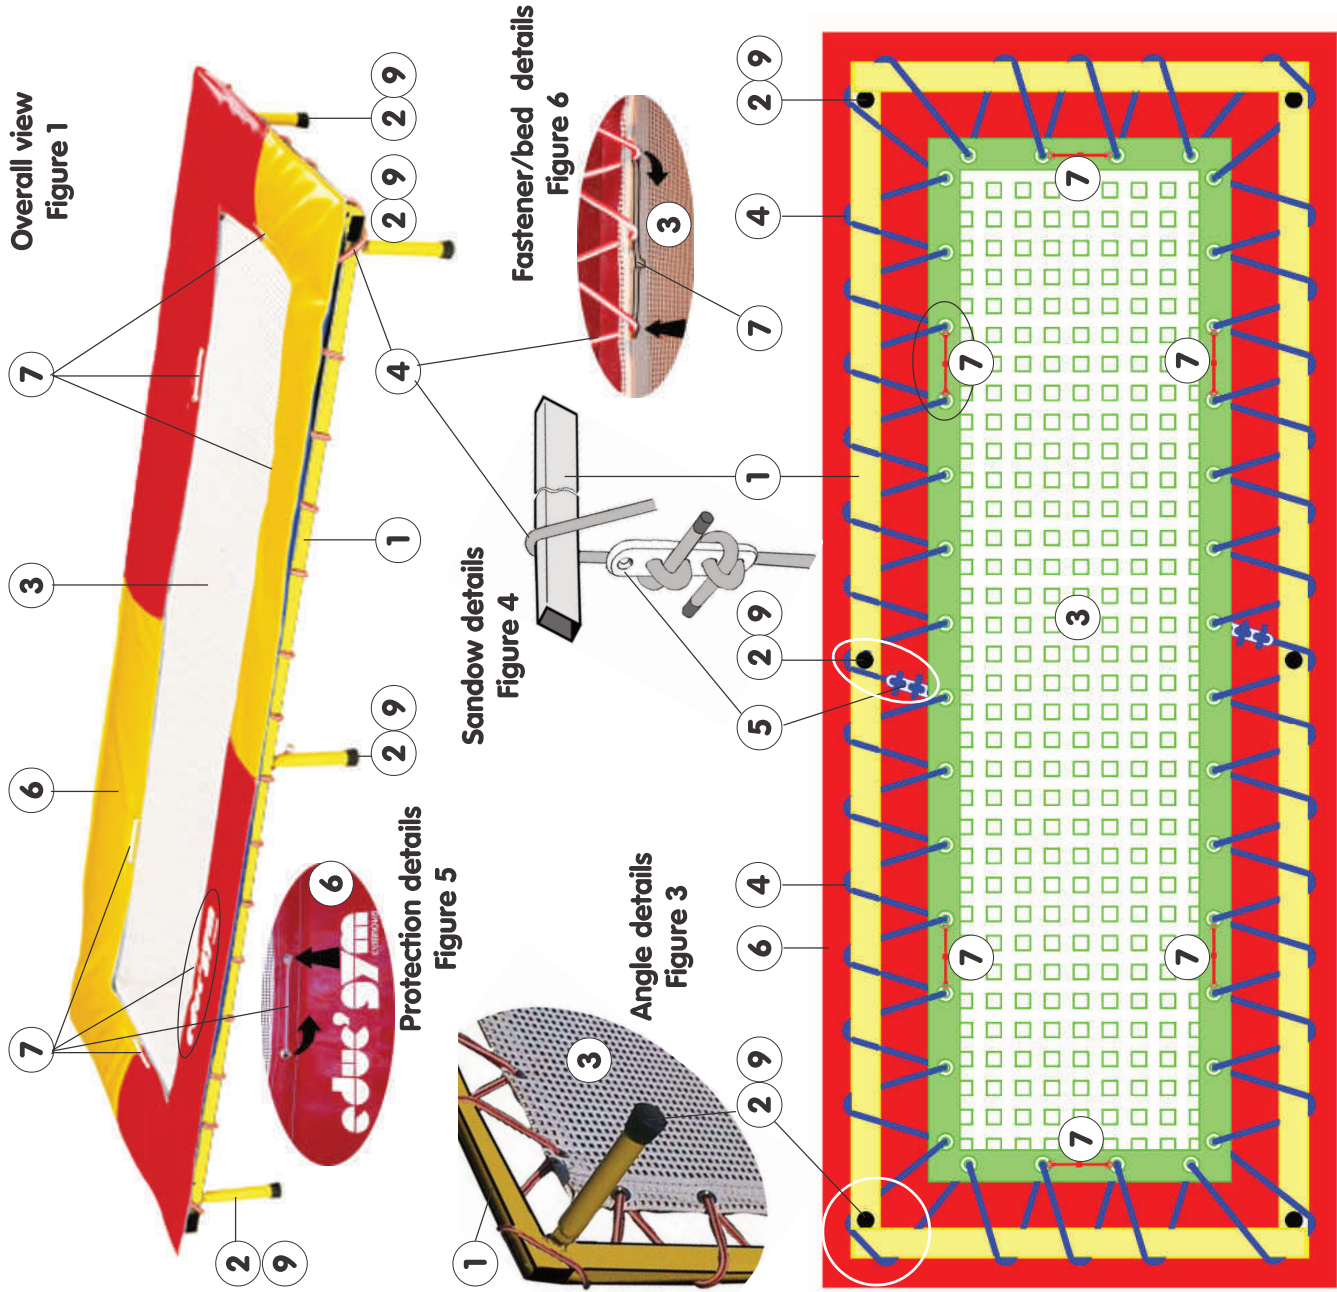

ITEM	QTY	DESCRIPTION	REFERENCE	REMARKS
30	-			-
29	-			-
28	-			-
27	-			-
26	-			-
25	-			-
24	-			-
23	-			-
22	-			-
21	-			-
20	-			-
19	-			-
18	-			-
17	-			-
16	-			-
15	-			-
14	-			-
13	-			-
12	-			-
11	-			-
10	-			-
9	6	12 x 20 external tooth lock washer	VREE12200Z	each
8	1	ø25 Pad for Baby-tramp	0013/06	set of 6
7	6	Protection plastic fastener	QAT50048BC	each
6	1	Triple Baby-Tramp Protection	0013/03	-
5	2	5-hole Plate/sandow	500/09	each
4	2	ø10 sandow – 5.70 m long	500/08	each (18.7)
3	1	Triple Baby-Tramp Bed	0013/02	each
2	6	Painted Leg with pad	0438/06	each
1	1	Frame, painted	-	-



RUE GASTON DE FLOTTE
13012 MARSEILLE
Tel : 33-(0)-4-91-87-51-20
Fax : 33-(0)-4-91-93-86-89

TRIPLE BABY-TRAMPOLINE

Bottom view – Figure 2

To order spare parts, provide the description, part no., and delivery date of the entire apparatus.