

HARNESS BELT M'16**2830**KEEP THIS
DOCUMENT**Warning:**

The apparatus should be used by only one person at a time, supervised by a qualified individual and with appropriate landing mats or a landing pit.
Using this equipment for purposes other than those originally intended is not allowed.

Compliance:

This equipment complies with the requirements of the European standard EN 358 « Personal Protective Equipment ».

Recommendations:

As shown in French Standard NF S52-400 the following is recommended:

- keep these instructions for subsequent reference (inspection, maintenance, etc.).
- periodically carry out predictive maintenance.
- depending on how much it is used have the equipment serviced yearly or every few years.

Packaging:

1 Pack:


Dimensions: 310 x 210 x 200 mm

Weight: 1.2 Kg Volume: 0,01 m³**I. Belt adjustment**


- 1** Position the belt on oneself. Center the backrest (1): check which N° (from 1 to 6) is positioned on the iliac crest (located on the sides, where your arms falling freely: see the black arrows).




2 Remove the belt. Match the concave part of the trunnion (5) with the number fitted step 1.

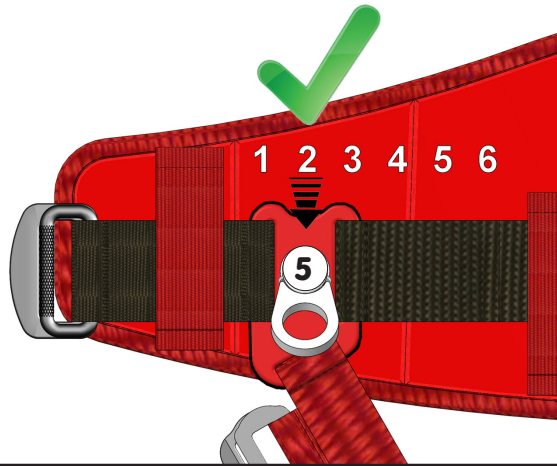

3 Using the safety buckle (6) slide the strap so that the concave part of the other trunnion (5) match the same number as step 2.

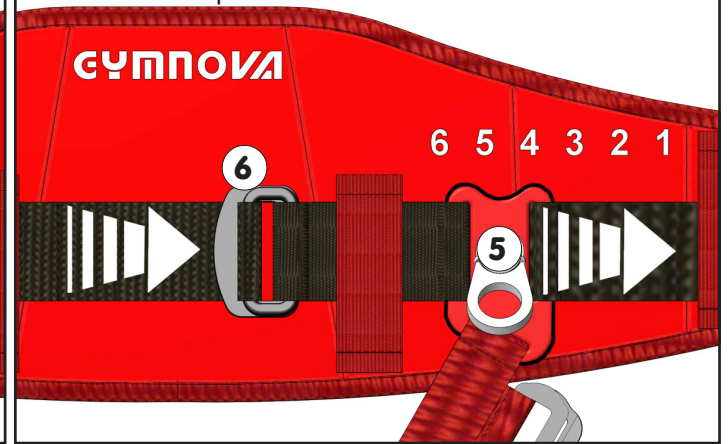


4 It is possible, depending on the settings, that the safety buckle (6) slide under or will be located under belt loops.

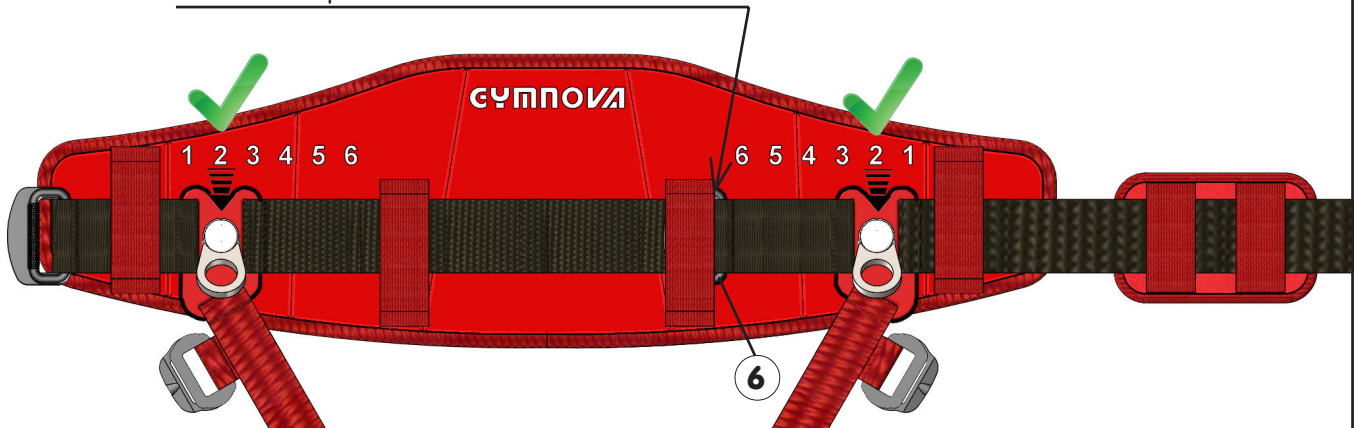


5 Use protective pad (2) for large body types: it protects against the contact of the safety buckle (6).

Optionnal protective pad (2) for small body types.

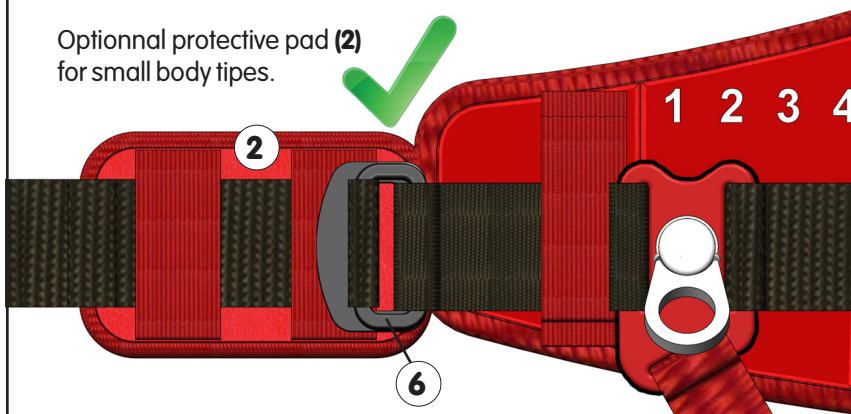

6 Attach & tighten crotch straps (4). Tighten firmly the belt strap (3).

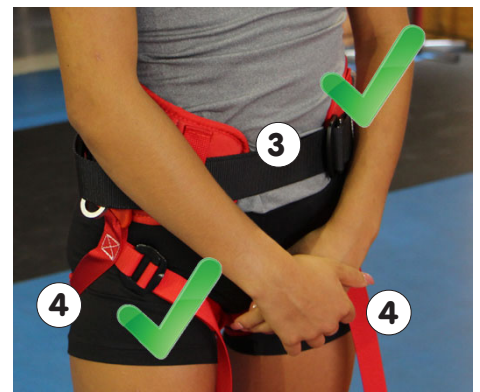

II. Maintenance:

- 1/ A regular cleaning of the assembly allows better viewing of the problems, if any (distortion, breakage, or corrosion).
- 2/ Before use, check wear parts and safety elements each time for good condition and operation:
 - complete trunnions (5),
 - safety buckles (6) & crotch (4) straps buckles, the entire straps (3 & 4), the backrest (1), and all the seams.
- 3/ **Important:**
 - **The replacement of this belt is strongly advised after 5 years service life and/or storage.**
 - If a problem is detected or suspected, do not use the equipment as long as it has not been checked by a technician.
 - Any damaged or distorted piece should be replaced as soon as possible.

III. Stockage:

Always store the equipment away from humidity and heat.



30	-	-	-	-
29	-	-	-	-
28	-	-	-	-
27	-	-	-	-
26	-	-	-	-
25	-	-	-	-
24	-	-	-	-
23	-	-	-	-
22	-	-	-	-
21	-	-	-	-
20	-	-	-	-
19	-	-	-	-
18	-	-	-	-
17	-	-	-	-
16	-	-	-	-
15	-	-	-	-
14	-	-	-	-
13	-	-	-	-
12	-	-	-	-
11	-	-	-	-
10	-	-	-	-
9	-	-	-	-
8	1	Pair of trunnions	2830/20	Service kit
7	1	Complete strap	2830/10	each
6	2	Metal safety buckles	-	included in 7
5	2	Complete trunnion	-	included in 7 & 8
4	2	Crotch strap	-	included in 7
3	1	Strap with trunnions	-	included in 7
2	1	Protective pad with loops	2830/02	each
1	1	Backrest with loops	2830/01	each
REP	NBR	DESIGNATION	REFERENCE	OBSERVATION

HARNES BELT M'16

To order spare parts, please provide the description, reference and delivery date of the entire apparatus.
 Constantly aiming to improve our products, we reserve the right to make changes to the equipment and dimensions without further discussion.

PAR: JM CHARBONNEAU | LE: 11/07/17 | NM278-GB

Ref.: 2830

THIS DOCUMENT IS THE PROPERTY OF GYMNNOVA. IT IS CONFIDENTIAL AND SHALL NOT BE REPRODUCED.