


**PAIR OF TRUNNIONS KIT
FOR HARNESS BELT M'13**

2830/20

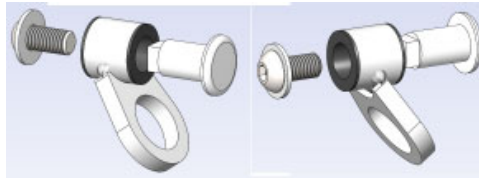

KEEP THIS DOCUMENT

Warning :

This equipment should be installed by a qualified individual.
Using this equipment for purposes other than those originally intended is not allowed.

Recommendations :

As shown in French Standard NF S52-400 the following is recommended :

- keep these instructions for subsequent reference (inspection, maintenance, etc.).
- periodically carry out predictive maintenance.
- depending on how much it is used, have the equipment serviced yearly or every few years.

Case of use :

Kit to be assembled on harness belt (Ref. 2830).

Packaging :


1 Package (Réf.: 2830/20) -> Weight: 0,20kg

Dimensions: 160 x 100 x 100 mm

Volume (m³) : 0.002 m³

Assembly :

1 Get out the ends of the strap (2) and (3) of belt loops (1) to reach the trunnions screws (4).

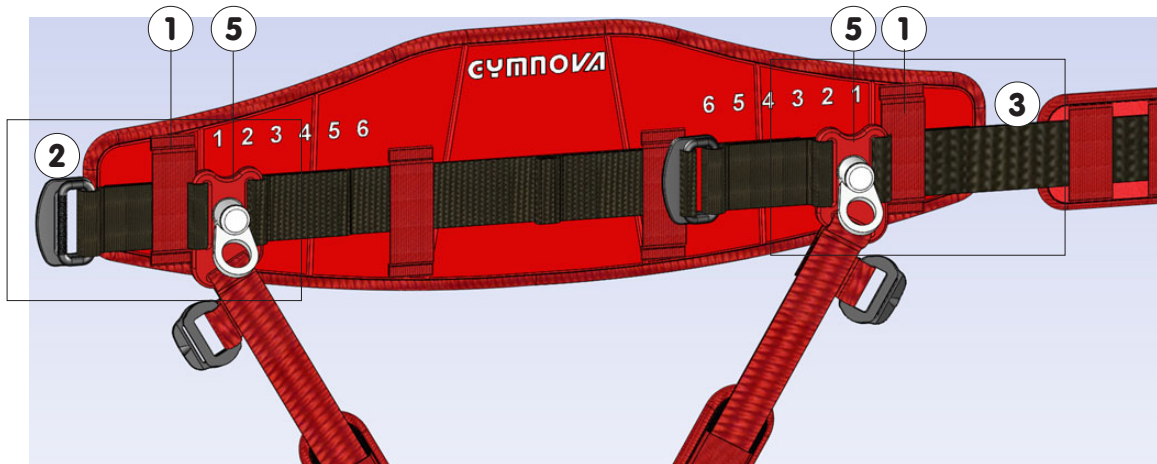

2 Remove the old system: dismount the screw (4) by keeping the support plate (5). Replace all: the trunnion (5) and its axis (6), not forgetting the bearing washer of screw (4). Tightening each system, before remount the ends of the strap (2) and (3).

